



GENERATION 3

3-Phase & Stackable Battery Installation Manual

3HY 20.0

10.2 HV, 13.6 HV, 17.0 HV, 20.4 HV

PREPARATION

Before installation, the following tools are required:

Item	Item Name
A	Drill
B	Suitable Drill Bit for Wall and Fixings
C	Set of Allen Keys
D	Multimeter
E	Knife
F	Wire Cutters
G	Wire Strippers
H	Crimping Tool
I	Socket Set for Wall Bolts
J	Tape Measure and Spirit Level
K	Pen/Pencil
L	RJ45 Crimping Tool (for making own LAN cable)
M	USB Stick (for updating firmware)
N	Laptop/Tablet/Phone with Internet Connection for Commissioning
O	Insulated Screw Drivers

Note: Please adhere to best practices and local legislation for manual handling processes when moving, lifting and installing the equipment.

SPECIFICATIONS



A TRUE MULTITASKER Hybrid Inverter

The 3-phase GivEnergy Hybrid Inverter is a battery inverter and solar inverter in one unit, meaning that the battery is AC and DC coupled.

It can be coupled directly with solar panels to generate usable electricity in the property, as well as store any excess energy in the battery for later use. It features easy plug and play installation and on / off grid phase balancing. Additionally, it will minimise import by discharging to meet demand in the property with a discharge rate of up to 11kW.

The unit can also be used as an AC coupled alongside existing solar installations.

SPECIFICATION

Dimensions

658H x 214D x 480W (mm)

Warranty

12 years

Weight

40.4Kg

Start Up Voltage

200V

Charge / Discharge Efficiency

97.5% / 97%

Operational Temperature

-25°C - +60°C

PV Max. Efficiency




98%

Max. DC Input Power

20kW - 30kW

BOX CONTENTS

Item	Item Name	Qty
A	Inverter	1
B	Wall Mounting Bracket	1
C	Bolt to Secure Inverter to Mounting Bracket	2
D	Mounting Bracket Fixings	5

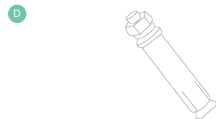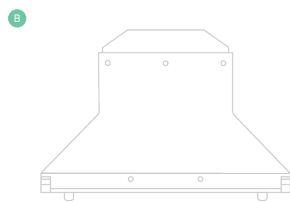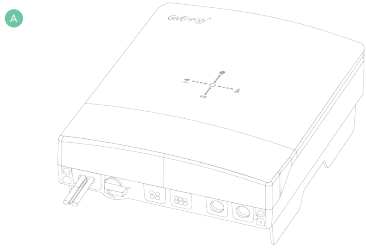

GENERAL INFORMATION

Introduction

All information contained in this booklet refers to the assembly, installation, commissioning, and maintenance of the 3-Phase Hybrid Inverter. Please retain this manual for future reference.

Legal Disclaimer: This document is the property of GivEnergy, reproduction is prohibited.

Installation Requirements

Installation of all GivEnergy equipment must be carried out by a **GivEnergy Approved Installer**. Please ensure that there is sufficient space and ventilation around the inverter and battery before installation.

Unit Information

The 3-Phase Hybrid Inverter is a battery inverter and PV inverter in one. It is bi-directional, meaning it can charge from the grid (AC coupled) and from solar (DC coupled). It can also charge from existing solar installations.

Storing the Inverter

The unit must be stored in its original packaging at temperatures between 25°C - 60°C. Do not stack more than 4 units on top of each other.

Packaging Contents


When unpacking, please check the following:

- ✔ There are no missing accessories from the packaging list
- ✔ The model and specification of the inverter's nameplate match the order specifications

If any damaged or missing parts are found, please contact GivEnergy on **01377 252 874** or email **support@givenergy.co.uk** immediately. Returns must be provided in original or equivalent packaging. The cardboard packaging is recyclable.

SYSTEM APPEARANCE

Item	Item Name
A	Power Flow Direction Indicators
B	Battery Connection Points
C	PV Input Switch
D	PV Input Terminals
E	4G Module USB Port (Optional)
F	Communication Ports
G	AC Supply Terminals (Right) and EPS Terminals (Left)
H	Serial No.
I	WiFi Serial No. and Verification Code
J	Warning Signs Label
K	Specification Label
L	Heat Sink

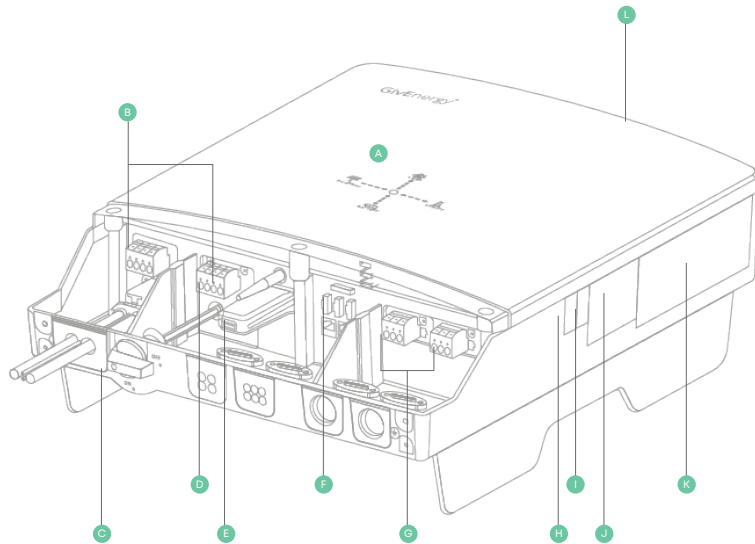

SAFETY AND INSTALLATION

Safety Instructions

Extra care and attention must be taken when installing and maintaining any GivEnergy equipment. The system is capable of retaining a high voltage, even when disconnected.

- ✔ If you suspect something is wrong with the inverter, contact GivEnergy on **01377 252 874** or email **support@givenergy.co.uk**
- ✔ If there are any damaged or missing parts, please contact the distributor immediately. Returns must be provided in original or equivalent packaging
- ✔ All electrical installations must be carried out by a qualified and registered electrician and in accordance with local wiring regulations
- ✔ During operation, the heat sink may become hot. Do not touch the heat sink at the sides, or the top of the inverter when in operation
- ✔ The inverter is designed to be connected to the grid; connecting your inverter to a generator or other power source can result in damage to the inverter or external devices
- ✔ All GivEnergy equipment must be installed by a GivEnergy Approved Installer



The inverter must be installed in an easily accessible location, the status display must be visible and not obstructed



Please ensure that the wall to be mounted on is sufficient enough to hold the weight of the inverter and battery pack



The inverter must be installed in a well ventilated area with 30cm clearance around it, free of any obstacles. The ambient temperature should be below 40°C to ensure optimal operation



The inverter must be installed vertically with connections always positioned at the bottom, never install horizontally, and avoid tilting the unit



Do not install in direct sunlight or near water sources



Mount the inverter at least 3 feet above ground level (outside only)

PRECAUTIONS

- Only GivEnergy supplied battery cables must be used
- Only GivEnergy batteries should be connected to our inverters
- Reversed polarity may damage the inverter


STEP-BY-STEP INSTALLATION

1. Please ensure that there is sufficient space and ventilation around the inverter and battery before installation.

Note: Take into consideration that batteries may be added at a later date. To allow for this, hang the inverter higher to ensure there is enough space.

If installing the products outside: make sure the products are not in direct sunlight, and are situated in a location where the inverter remains within operating temperatures. This is to ensure the unit remains fully functional.


2. The bracket is attached to the inverter when in the box. Take off the 2 bolts at the bottom to remove the bracket.
3. Wall thickness should be suitable to hold the weight of the inverter. Place the wall mounting bracket horizontally onto the wall and mark the position for the bracket holes.

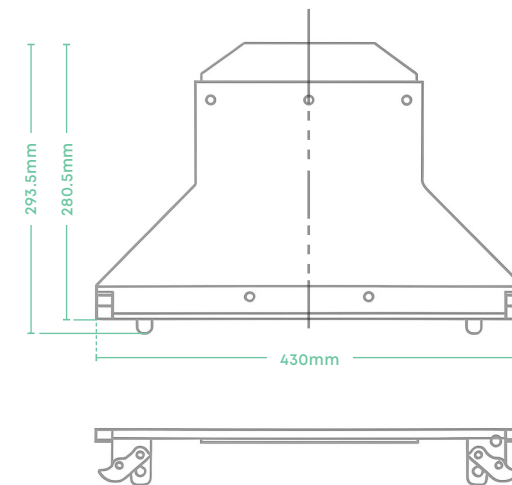


STEP-BY-STEP INSTALLATION

4. Drill 5 holes at the marked positions, at least 75mm deep. Fix the mounting bracket to the wall using 5 x M6x50 expansion bolts.

Please note: If fitting the inverter to a non-masonry wall, different fixings will be required.

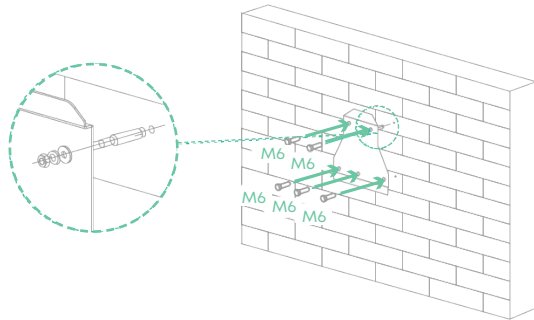


5. Mount the inverter onto the mounting bracket.

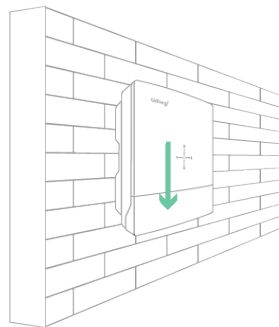

STEP-BY-STEP INSTALLATION


6. Insert the 2 x M4 safety locking screws on the left and right side to prevent the inverter from being lifted off the bracket.

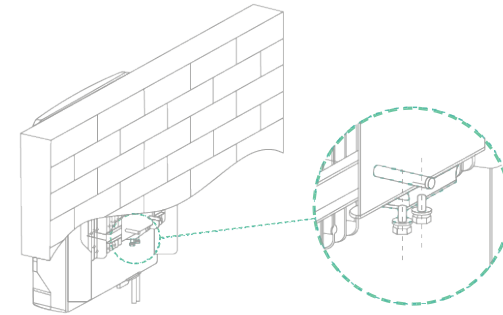

7. Remove the bottom cover. Remove the 2 screws on the bottom of the inverter with the Allen key. Pull down the bottom cover and push the grommet out of the way.

8. Make sure the DC PV isolator is switched OFF.

Wiring

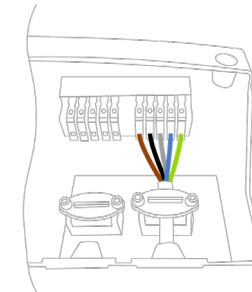

9. You must install a separate AC circuit-breaker per inverter in order to ensure that it is adequately protected and can be safely disconnected under load. Please follow local legislation.

For easy installation, you can take out the lever arch plug.

- a. Lift up the lever
- b. Connect the correct conductor to the corresponding lever
- c. Put the lever arch plug back into the inverter

STEP-BY-STEP INSTALLATION

To connect the AC connector:

- a. Connect the cables to their respective connection ports
- b. Cut a hole in the cable grommet
- c. Put the saddles over the cables to ensure they stay where they are
- d. For the LAN cable, make a cut down the middle of the grommet and place back in its original position

To connect the meter connections:

- a. Push and hold the orange tab
- b. Plug in the cable
- c. Release the orange tab
- d. Pull the cable slightly to ensure it is secure

The PP cable will also need to have a grommet. If installing a battery, remove the PP cable from the HV installation kit. To connect the PP cable to the inverter, make sure to use the right end of the cable. The grommet end is the inverter end.

- a. Pull down the red tab
- b. Push the connector into the socket until it clicks
- c. Push the red tab back in
- d. Check that the grommet is positioned correctly

10. Test polarity of the PV cables.

11. 4G Dongle. Adjust all dipswitches to off and place the dongle into the USB port under the inverter. Use the securing screws to secure in place.


12. Replace the bottom front cover by sliding it up from the bottom of the inverter. Make sure that all of the grommets are seated properly. Replace the 2 securing bolts under the inverter, taking care not to overtighten.

Note: Everything is currently isolated and the inverter is not yet live.

CLEARANCE AND MAINTENANCE

Space Clearance

There must be adequate clearance around the inverter to allow for heat dissipation. The diagram below illustrates the space required around the inverter.

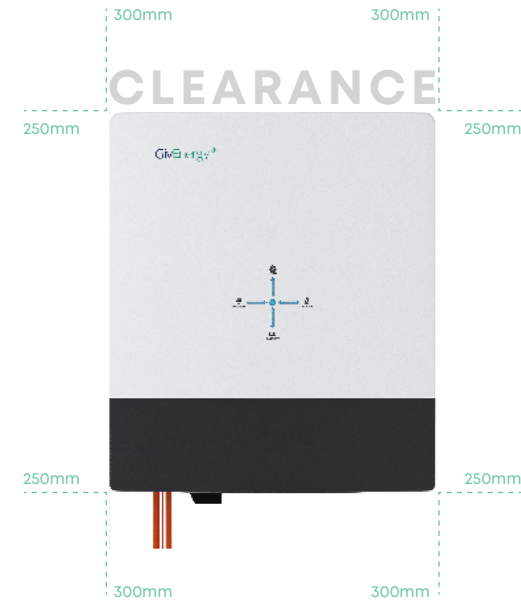

Maintenance

When maintaining and cleaning the inverter, the **whole system must be powered down**. Clean with a soft cloth with a light detergent if needed.

To ensure your inverter operates optimally at all times, annual maintenance checks need to be carried out. Check for visible damage or discolouration of the switch, and that the cables are intact. Please ensure that the top of the inverter is not obstructed in any way.

We recommend operating the rotary isolator from ON to OFF 5 times, this cleans the contacts of the rotary switch.


CONNECTIONS OVERVIEW

Item	Item Name
A	Battery Connection Point
B	MPPT 1 PV Input x 2
C	MPPT 2 PV Input x 2
D	Built-In WiFi Aerial
E	Communication and LAN Connectors
F	EPS Connection
G	AC Connection
H	DC Input Isolation Switch
I	Cable Clamps
J	Dipswitch
K	IP65 Cable Entry Glands




COMMUNICATION CONNECTIONS

Dip Switches

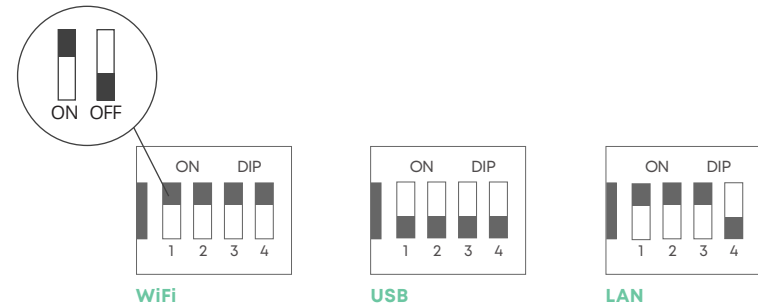


Communication/Network Ports

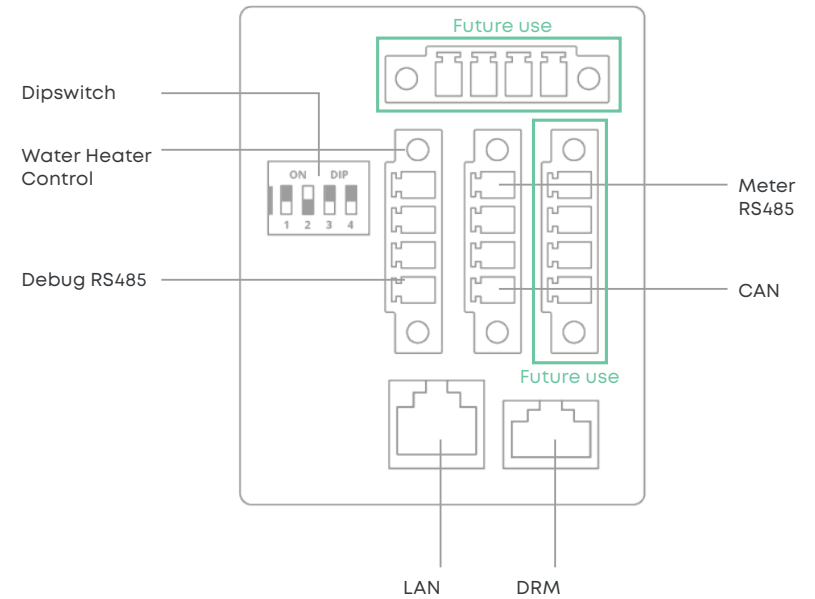


COMMUNICATION CONNECTIONS

Dip Switches

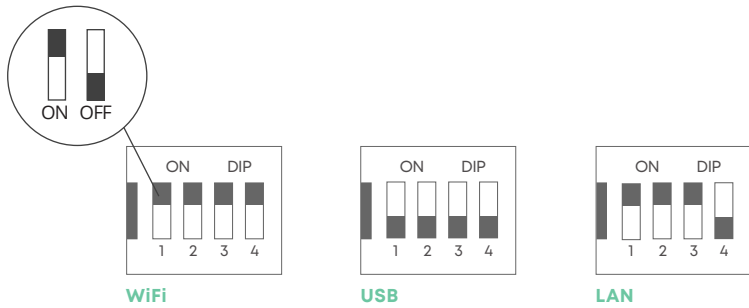

Alternate Communications Port (Parallel Version)

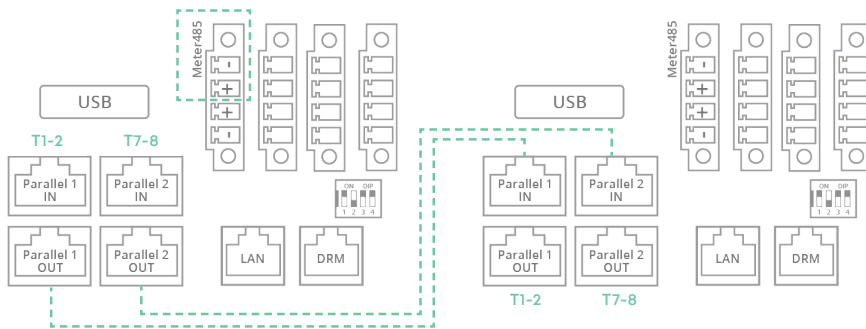

Key Information

- Ensure 3 phase power cabling is correct L1 L2 L3 & N on each inverter
- If wrong – damage will result
- Metering need only go to Inverter 1
- Ensure both inverters are of the same power ie both 20kw
- Ensure both inverters are on same firmware. ie ZBxxxxxx (ZAxxxxxx is NOT suitable for parallel)
- This can be **extended up to 6 Inverter's**. Ensure the terminators are on 1st and last inverter
- Each inverter should be online and commissioned to the SAME account
- Each inverter should have the same size battery capacity



Wiring of Inverter Links & Meter

Inverter 1 Parallel1 In – 1.2 Terminator
 Inverter 1 Parallel2 In – 7.8 Terminator
 Inverter 1 Parallel1 Out – Inverter 2 Parallel1 In
 Inverter 1 Parallel2 Out – Inverter 2 Parallel2 In
 ID1 SDM630 – Connect to Inverter 1 Meter

Note: correct +ve & -ve polarity using Belden RS485 Cable

AC UTILITY GRID CONNECTION

Cable size requirements for the 3-Phase Hybrid Inverter are dependent on the model and the legislation of the country it is being installed:

- **3HY 20.0** - Ensure use of adequately sized supply cable to handle the full current/pass-through of the inverter, to a maximum of 16mm²

The installer must calculate the size of cable needed based on the legislation and cable run length.


	Maximum Output	Overcurrent Protection	RCD Protection (if required)	Cable Size*
3HY Hybrid 6.0kW	10.5A	C16	TYPE A 30mA	6mm ² - 16mm ²
3HY Hybrid 8.0kW	13.5A	C20		6mm ² - 16mm ²
3HY Hybrid 10.0kW	16.5A	C20		6mm ² - 16mm ²
3HY Hybrid 11.0kW	18A	C20		6mm ² - 16mm ²
3HY Hybrid 20.0kW	26A	C32		6mm ² - 16mm ²

The installer must calculate the size of the cable needed based on the legislation and cable run length.

CONNECTING TO THE EPS

The Emergency Power Supply (EPS) can provide a maximum output power of up to 20000W during a grid failure. This output must be protected as close to the inverter as possible, with a adequate over current and residue current protection.

There are 4 approved methods to connect to the EPS, please refer to the EPS Connection Guide for more details.

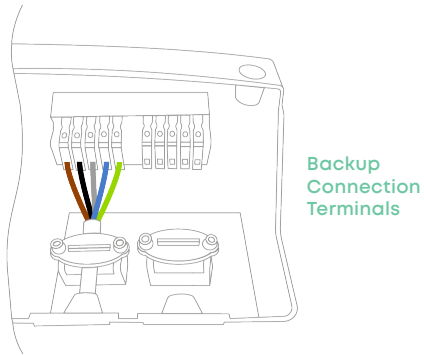

If the backup terminals are used, please ensure the following:

An earth rod must be installed and connected to the main earthing terminal, as close to the origin of supply as possible, and adequate overload / short circuit protection must be installed in accordance with the local wiring regulations.

If using EPS with Parallel, pay special attention to the wiring

Ensure the phases are NOT mixed up. Damage will result.
Link all L1's, L2's L3's and N's to parallel the EPS out.
The total power available will be the max of each inverter combined.



The EPS MAX output power is 20000W. If the EPS goes over its max output, the inverter will go into fault. The EPS output will only operate when the battery(s) have capacity available.


Any other grid tied generation must be supplied from the grid side of the changeover switch to avoid damage to the inverter, and void in warranty (see the following diagrams for reference).

CONNECTING GRID METER TO INVERTER

In the system, a mid approved meter must be installed to ensure correct monitoring of the grid power. The inverter uses this information to decide whether to charge or discharge the battery.

The CT clamps connected to the mid approved meter must be installed around the live incoming supply to the property, with the arrow pointing in the direction of grid import, in order to monitor the complete consumption of the building.

For further information, please visit the Resource Hub on the GivEnergy website for the meter guide.

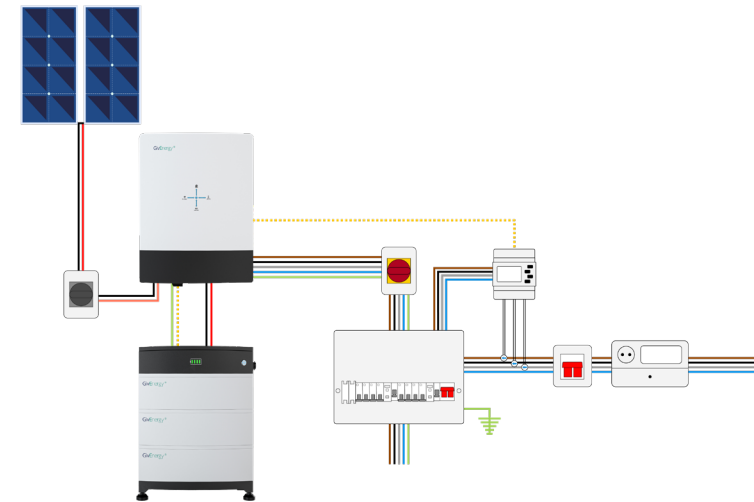

SPECIFICATIONS



CUSTOMISED POWER, TO YOUR PROPERTY Stackable Battery

Our stackable battery is designed to work alongside the GivEnergy 3-Phase Hybrid Inverter.

High voltage BMS allows for greater charge and discharge power running at a lower current, providing higher efficiency than our lesser voltage range.

SPECIFICATION

Max. Dimensions (20.4kWh)
1085H x 380D x 480W (mm)

Max. Current
25 VDC

Max. Weight
226.3Kg

Voltage
187 - 520 VDC

**Standard Charge/
Discharge**
0.5C

**Charging
Temperature**
0°C - 55°

Max. Capacity
20.4 kWh / 51 Ah

Max. Voltage
525V

Warranty
12 years

System Sizing

- High Voltage (HV) inverters can operate with **3 to 24 battery packs**.
- The available DC battery power is approximately **2.2 kW per connected battery**. Therefore, the total power output depends on the number of battery packs used in your system.
- Batteries can be arranged in a **single stack of up to 6 packs**. You can also **parallel up to 4 stacks** of batteries to increase your system's capacity. For example, to achieve a 20 kW DC battery power output, you would need a minimum of 10 battery packs, arranged as two parallel stacks of 5 packs each.
- **If you plan to parallel battery stacks**, please inform your wholesale supplier that you require the **newer stackable battery kits**. These kits are specifically designed for parallel configurations and feature both "In" and "Out" battery connections, which are essential for proper system operation.
- **Always ensure you size the system to meet the customer's specific power requirements** by selecting the appropriate number of HV battery packs.
- Parallel battery operation is **supported on all HV inverters** - 8/10kW single phase, 11kW 3 phase & 15/20kW 3 phase.

BOX CONTENTS

GIV-BAT HV Kit

Item	Qty
Base Plate	1
HV Box	1
Cable Inverter to HV Box	1
Template / Positioning Part	1
Wall Bolts	2
M6 Screws (Securing Battery Stack)	2
Plug to Plug Cable with Grommet	1

Battery (10.2kWh)

Item	Qty
Battery	3
Giv-Bat HV Kit	1
Screws	2

Battery (13.6kWh)

Item	Qty
Battery	4
Giv-Bat HV Kit	1
Screws	2

Battery (17.0kWh)

Item	Qty
Battery	5
Giv-Bat HV Kit	1
Screws	2

Battery (20.4kWh)

Item	Qty
Battery	6
Giv-Bat HV Kit	1
Screws	2

One battery is 3.4kWh. A minimum of 3 batteries is required and a maximum of 6 is possible

GENERAL INFORMATION

Introduction

All information contained in this booklet refers to the assembly, installation, commissioning, and maintenance of the stackable batteries. Please retain this manual for future reference.

Legal Disclaimer: This document is the property of GivEnergy, reproduction is prohibited.

Installation Requirements

Installation of all GivEnergy equipment must be carried out by a **GivEnergy approved installer**.

HV Unit Information

The stackable batteries are designed to work with a GivEnergy 3-Phase Inverter.

Storing the Battery

The units must be stored in their original packaging at temperatures between -30°C - 60°C.

Packaging Contents

When unpacking, please check the following:

- ✔ There are no missing accessories from the packaging list
- ✔ The model and specification of the battery's nameplate match the order specifications

If any damaged or missing parts are found, please contact GivEnergy on **01377 252 874** or email **support@givenergy.co.uk** immediately. Returns must be provided in original or equivalent packaging. The cardboard packaging is recyclable.

Disposing of Packaging

Recycle as much as possible and dispose of waste in the correct place.

Disposing of Hardware at the end of its lifetime

The units must be safely removed by a qualified professional. Local regulations must be adhered to and disposed of at the correct recycling place.

SYSTEM APPEARANCE

Item	Item Name
A	STATUS
B	ON/OFF Switch
C	HV Box
D	Rotary Isolator
E	Battery Packs
F	Base Plate
G	Adjustable Feet
H	Securing Screws
I	Earthing Point
J	Battery Connection Point



SAFETY AND INSTALLATION

Safety Instructions

Extra care and attention must be taken when installing and maintaining any GivEnergy equipment. The system is capable of lethal voltages, even when disconnected

- If you suspect something is wrong with the battery, contact GivEnergy on **01377 252 874** or email **support@givenergy.co.uk**.
- If any damaged or missing parts are found, please contact GivEnergy on **01377 252 874** or email **support@givenergy.co.uk** immediately. Returns must be provided in original or equivalent packaging. The cardboard packaging is recyclable.

Installation Instructions and Precautions

- All electrical installations must be carried out by a qualified and registered electrician and in accordance with the IEE Wiring Regulations
- Ensure batteries are always fixed to the wall using the mounting bracket, even when the weight of the product is on the floor
- All GivEnergy equipment must be installed by a **GivEnergy approved installer**
- Externally mounted batteries must always be wall mounted above the frost-line or a minimum of 50mm
- An earth bond must be installed between all batteries and inverters
- Do not remove the front cover unless instructed by the GivEnergy support team
- Only GivEnergy supplied battery cables must be used



Do not use the battery if there are any deformities, such as bulging or leakages



Do not puncture the battery



Do not throw the battery or use forceful impact



Do not attempt to repair the battery yourself (please call your Approved Installer)




The battery must be installed vertically, never install horizontally, avoid tilting the unit




Do not install in direct sunlight

STEP-BY-STEP INSTALLATION

1. Place the base plate down as close to the wall as possible. The base plate needs to be flush to the wall. Cut out the skirting board if in the way.

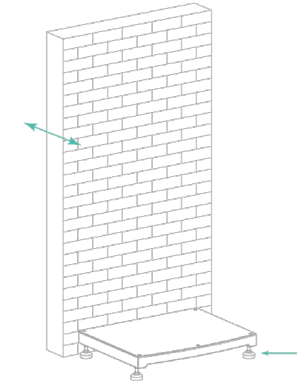


2. Stack the battery modules on the base making sure they are flush to the wall. Adjust the feet to make sure they are flush to the wall and level left and right. Once all of the battery packs are in place use the template to determine the location of the wall bolts. Ensure the template is level and completely flush to the wall.

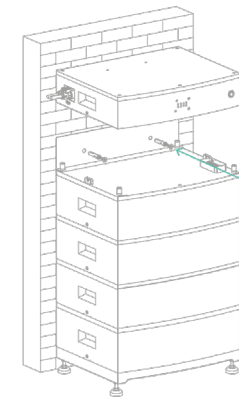


STEP-BY-STEP INSTALLATION

3. Use the template/positioning part to mark holes for the 2 bolts for the HV box.
4. Drill two holes at the marked points to suit the fixings. Install and tighten the two expanding bolts, leaving a 3mm gap between the bolt head and the wall to secure the HV Box.
5. Make sure the isolator is switched off before putting on the HV box.
6. Place the HV box on top of the batteries.

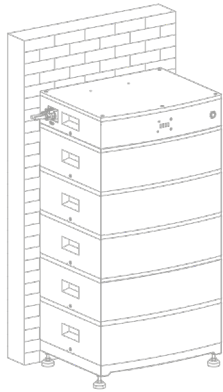


7. Connect all of the packs together (including base plate and HV Box) using the supplied screws on both sides.

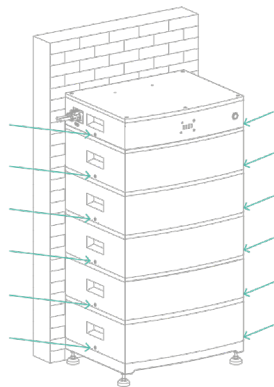


CONNECTING THE BATTERY TO THE INVERTER

1. Connect the cable to the battery and the other end to the inverter. Ensure that the grommeted end of the cable is the inverter end. Push the plug until there is a click, lock in place using the red tab.

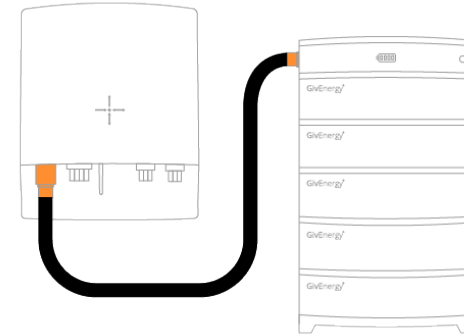


2. Make sure there is one cable (under local legislation, 6mm² earth cable suggested) running from one of the earthing points on the bottom of the inverter to the earthing point on the stackable battery.
3. When ready to power up the unit, switch on the isolator on the battery. Push and hold the button for 2 seconds to switch on the battery stack. The lights should then illuminate. The system is now ready for commissioning.

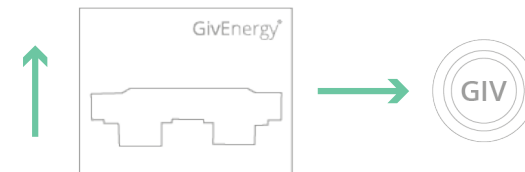

CONNECTING MULTIPLE BATTERY STACKS

1. Connect the cable to the battery and the other end to the inverter. Ensure that the grommeted end of the cable is the inverter end. Push the plug until there is a click, lock in place using the red tab. Connect the second stack to the output connector in the first stack.

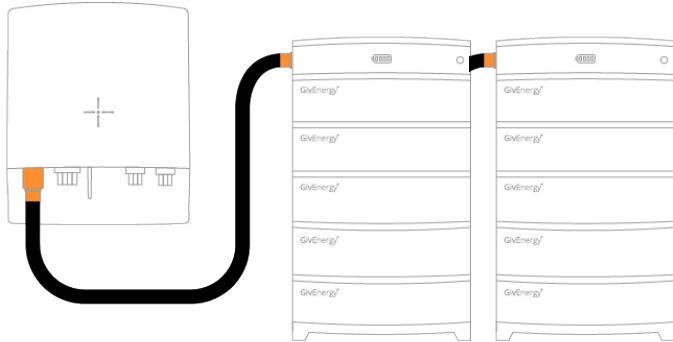


2. Power on is the same as with a single stack.
3. For Parallel battery operation, ensure your wholesaler supplies the HV Kit for this purpose. It has a Green DC Isolator and 2 Orange DC Connectors (In/Out).

BATTERY CABLES

One type of cables exist for connection to the stackable battery:

Plug to plug battery cable

Instructions on how to install the cable are also on the plug itself.

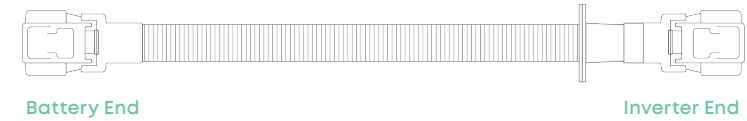

IMPORTANT

All stackable battery cables are included with the product.
Beware of inverter end and battery end.

To disconnect the cable:

1. Pull down the red tab.
2. Push the red tab down.
3. Press the orange tab.

To connect the cable:

1. Push in the connector.
2. Pull in the red tab.

Note: Make sure the plug is fully plugged in.

START-UP AND SHUT-DOWN OF THE SYSTEM

Start-Up Procedure

1. Connect the AC circuit breaker, ensure that the system is powered.
2. Check to see that the status light in the centre is flashing.
3. Turn on the PV switch.
4. The PV indicator should light up on the inverter (if the sun is shining).
5. Turn on the battery isolator.
6. Push the button on the front of the battery until the LED lights up.
7. Wait for the relays to start up.
8. Make sure that the battery has a green status.
9. The battery indicator on the inverter should light up.
10. The system is ready to be commissioned as soon as it is powered up. Commission using the portal/app. Ensure that the grid power is reading identical to that of the mid approved meter (this can be found on the screen of the meter).

Shutdown Procedure

1. Turn off the battery by pressing the button on the front until lights have gone out.
2. Switch off the battery isolator to prevent it from being reactivated.
3. Turn off the PV switch.
4. Disconnect the AC circuit breaker to prevent it from being reactivated.
5. Wait until all LEDs have gone out. The inverter is now shut down.

COMMISSIONING A SYSTEM

All systems must be commissioned to ensure correct battery and meter communications, as well as connection to the online portal.

Please ensure the following conditions are met before commissioning:

The inverter is connected to the internet and the connection guide has been followed correctly.

Check that all the wires are securely connected before the battery isolator and the AC isolator is switched on. You MUST set the parameters of the battery according to your battery system.

Accessing the Commissioning Portal

Sign into the online portal at <https://portal.givenergy.cloud> with your GivEnergy Engineer login. If you are a first time user, and you do not have an account or Engineer login, please consult your supplier to get this set up.

- ✔ To download a fully illustrated guide, please visit the Resource Hub on the GivEnergy website.

Note: If commissioning is incomplete, leave the battery off to avoid it going flat. Without commissioning, the system may not operate correctly.

DIP SWITCHES AND STATUS INDICATORS

Status Indicators



What does the STATUS light mean?

OFF	Shut Down
Green	Battery Energy. Flicker - Battery Charge
Green Light	System Boot
Red	System Failure
Sound	Firmware Update or A Fault (Please consult the app or portal)

CLEARANCE AND MAINTENANCE

Space Clearance

There must be adequate clearance around the batteries to allow for heat dissipation. The diagram below illustrates the space required around the battery.



Maintenance

When maintaining and cleaning the stackable battery, the **whole system must be powered down**. Clean with a soft cloth with a light detergent if needed.


To ensure your stackable battery operates optimally at all times, annual maintenance checks need to be carried out. Check for visible damage or discolouration of the switch, and that the cables are intact. Please ensure that the top of the stackable battery is not obstructed in any way.

We recommend operating the rotary isolator from ON to OFF 5 times, this cleans the contacts of the rotary switch.


FAN MAINTENANCE

Fan maintenance is required at least twice a year, or when performance is reduced. Perform fan maintenance while the inverter is off to prevent sporadic fan activation.


1. Pull the switch down to open the fan case.

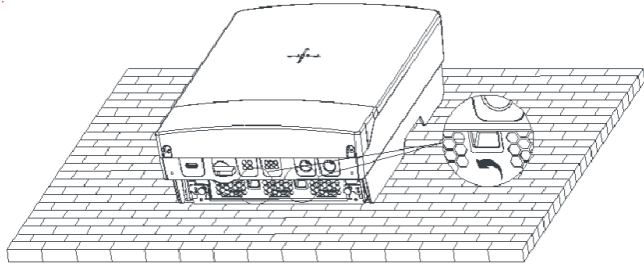

2. Firmly press the buckle of the plug-in terminal and pull out the male connector of the fan cable.

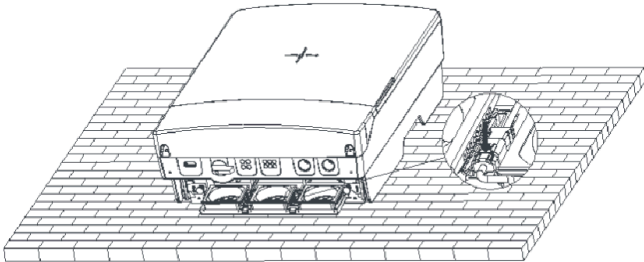

3. Lift up the fan latch and take out the fan. Once the fans are removed they can be cleaned with a dry cloth, do not use anything wet or spray cleaning liquid onto the fans.

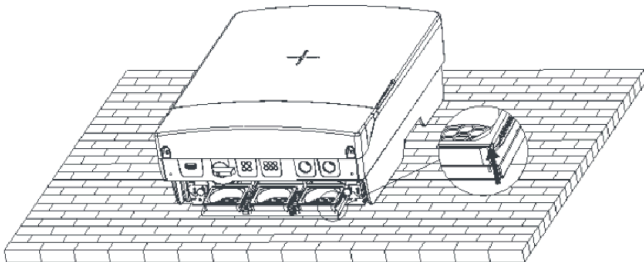

PARAMETER AND MODEL COMPARISON TABLE

Parameter Type	GIV-BAT 20.4-HV
Height above ground (L)	1025mm
High Voltage (UH)	525.6Vd.c
Low Voltage (UL)	403.2Vd.c
Measuring Voltage (UM1)	474~486Vd.c
Measuring Voltage (UM2)	432Vd.c

DECOMMISSIONING A SYSTEM

Uninstalling the Inverter

1. Follow the shut-down procedure.
2. Remove all connections and cables from the inverter.
3. Remove the bolts which are securing the inverter to the bracket.
4. Lift the inverter off the bracket.
5. Remove the wall bracket.

Packaging the Inverter

If possible, always pack the inverter in its original packaging and secure it with tension belts. If this is not available, you may also use an equivalent sized box. The box must be capable of being closed completely and be strong enough to support both the weight and the size of the inverter.

Storing the Inverter

Store the inverter in a dry place where ambient temperatures are always between -25°C and +60°C.

Uninstalling a Battery

1. Follow the shut-down procedure.
2. Remove all cables.
3. Remove the bolts securing the HV box.
4. Lift the HV box.
5. Lift off all of the battery packs.
6. Remove the base plate.

WORK MODES & TROUBLESHOOTING



Eco Mode

The system optimises the delivery of generated PV power and battery power to prioritise the home load. Grid power is used as a last resort if solar and battery power are unavailable.



Off Peak Charging

This is prioritised to charge the battery during off peak times when energy is cheaper, greener, and cleaner. The battery will start to discharge outside of the off peak time when energy is more expensive.



Back Up / Island Mode

The system has the ability to be used in the event of a power cut. To utilise this feature, circuits must be connected to the inverter's EPS terminals.

To download a fully illustrated guide on connecting the inverter to the EPS, please visit the Resource Hub on the GivEnergy website.

If you have any questions, please contact GivEnergy on **01377 252 874** or email **support@givenergy.co.uk**. Alternatively, please visit the Resource Hub on the GivEnergy website.

MANUFACTURER WARRANTIES

This inverter and stackable battery are covered by a 12-year warranty. Please refer to the warranty document for further specifications.



Hybrid Inverter Gen 3
3-Phase / 20.0
12-year warranty



Stackable Battery
HV 10.2/ 13.6/ 17.0/ 20.4/ 23.8
12-year warranty

GivEnergy

Phone

UK +44 01377 252 874
NL +31 85 208 6376

Email

UK support@givenergy.co.uk
NL support@givenergy.com
SA support.sa@givenergy.com
AU martin.cobb@givenergy.com

Website

www.givenergy.com